 


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	32P501	Cap	30	32M522	Spring	61	35P058	O-Ring
2	35P002N	Piston	31	32M523	Bracket	62	35P059	O-Ring
3	35P003N	Piston Rod	32	34M524	Pusher Unit	63	35P060	O-Ring
4	35P004	Block	33	35P034	Roller	64	35P061	O-Ring
5	35P005	Spring	34	35P033	Spring	65	35P062	Rod
6	35P006	Collar	35	32P535	Rod Nut	66	35P063	Screw
7	35P007N	Body	36	35P037	Right pusher guide	67	35P064	Screw
8	35P008	Air Plug	37	35P032	Rod	68	35P065	Spring Washer
9	35P009	Block	38	35M032	Left pusher guide	69	35P066	Spring Pin
10	35P010	Spring	39	32M531	Bracket	70	32P570	Screw
11	35P011	Trigger	40	35P039	Washer	71	35P069	Screw
12	35P012	Spring	41	32P541	Silencer	72	35P070	Pin
13	35P013	Rod	42	35P040N	Screw	73	35P071	Pin
14	35P014	Trigger's control	43	35P042N	O-Ring	74	35M046N	Screw
15	35P015	Spring	44	35P043	Nut	75	35P072	Spring Pin
16	35P016	Valve	45	35P044	Washer	76	35P076	Lock Nut
17	35P017N	Tube	46	35P045	O-Ring	77	32P577	Screw
18	35P018	Adjusting Rod	47	35P046N	O-Ring	78	32M549	Spring Pin
19	35P019	Adjusting Plate	48	35P047	Washer	79	35P081	E-Ring
20	32P520	Front plate	49	35P041	Spring Washer	80	35P080N	C-Ring
21	35P021	Right jaw	50	35P048	Screw	81	35P084	Heli-Coil
22	35P022	Left jaw	51	35P049	Spring Pin	82	35P085	Plastic Pin
23	35P023	Jaw seat	52	35P050	Screw	83	19B091	Counter Balance Hanger
24	35P024	Plate	53	35P051	Trigger Screw	85	32P585	Screw
25	32P525	Block	55	35P052	Spring Pin	07.25		Hex. Bar wrench
26	34M518	Driver	56	35P053	Teeth Washer	07.30		Hex. Bar wrench
27	35P027	Cover Unit	57	35P054	Screw	07.40		Hex. Bar wrench
28	32M520	Magazine Seat	58	35P066	Spring Pin	D01		Oiler
29	34M521	Magazine	59	35P056	O-Ring	D06		Staple remover

Dotazioni - Equipment - Ausrüstung - Équipements - Equipamiento - Παρεχόμενα
Equipamento - Uitrusting - Udstyr



 
07.25




07.30



07.40



D01

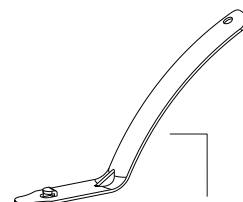

D06