



PN80		EVERWIN PNEUMATIC			
Item NO	Part NO.	Part Name	Item NO	Part NO.	Part Name
1	100009	Screw	43	100188	Screw
2	100010	Exhaust Cover Holder	44	100179	Straight Pin
3	100011	O-Ring	45	100045	Screw
4	100243	Exhaust Cover	46	100078	Washer
5	100014	Exhaust Cover Seal	47	100263	Door
6	100244	Cylinder Cap Unit	48	100080	Hook Dust Cover
7	100127	Screw	49	100265	Dust Cover
8	100143	Protector	50	100194	Step pin
9	100144	Cylinder Cap Seal	51	100090	Roll Pin
10	100289	Spacer, Exhaust	52	100085	Spring
11	100250	Piston Stop	53	100197	Check Pawl
12	100146	Compression Spring	54	100084	Spring
13	100219	Head Valve Washer	55	100083	Door Latch
14	100147	O-Ring	56	100269	O-Ring
15	100252	Head Valve Piston	57	100098	O-Ring
16	100149	O-Ring	58	100270	Feed Piston
17	100278	Main Piston Unit	59	100206	Compression Spring
17-1	100151	Main Piston	60	100205	Feed Piston Stop
17-2	100279	Driver	61	100207	Spring Collar
18	100153	O-Ring	62	100104	C-Ring
19	100154	Cylinder Seal	63	100046	Washer
20	100256	Cylinder	64	100115	Rubber Washer
21	100156	O-Ring	65	100113	Receiver Spring
22	100157	Cylinder Ring	66	100079	Step pin
23	100158	O-Ring	67	100073	O-Ring
24	100159	O-Ring	68	100066	Roll Pin
25	100142	Grommet	69	100092	Spring
26	100161	Frame	70	100267	Feed Pawl
28	100257	PN80 Lable	71	100095	Step Pin
29	100037	Warning Label	72	100297	Nail Support
30	100220	Roll Pin	73	100112	Magazine Post
31	100174	Roll Pin	74	100275	Magazine
32	100063	Trigger Valve Unit (TVU)	75	100168	O-Ring
33	100067	Trigger Unit	76	100184	End Cap
34	100175	Contact Arm Guide	77	100117	Nut, Elastic Stop
35	100185	Compression Spring	78	100271	Magazine Cover
36	100258	Contact Arm	79	100110	Spacer
37	100176	Bumper"A"	80	100111	Spring
38	100177	Bumper"B"	81	100216	Contact Arm Cover
39	100180	O-Ring	82	100119	Collar
40	100283	Driver Guide	83	100280	Remote Control Valve
41	100296	O-Ring			
42	100260	Nose			