

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	32P501	Cap	35	35R035	Top Guide	69	35P060	O-Ring
2	35P002N	Piston	36	35R036	Leaf Spring	70	35P061	O-Ring
3	35P003N	Piston Rod	37	19I037	Right Coil Guide	71	35P062	Rod
4	35P004	Block	38	19I038	Left Coil Guide	72	35P063	Screw
5	35P005	Spring	39	35R039	Magazine Seat	73	35P064	Screw
6	35P006	Collar	40	19R040	Shaft	74	35P065	Spring Washer
7	35P007N	Body	41	19R041	Washer	75	35P066	Spring Pin
8	35P008	Air Plug	42	19R042	Shaft	76	32P570	Screw
9	35P009	Block	43	19R043	Lever	77	35P069	Screw
10	35P010	Spring	44	19R044	Cover	78	35P070	Pin
11	35P011	Trigger	45	35P092	Plate	79	35P071	Pin
12	35P012	Spring	46	35R540	Screw	80	35R531	Nut
13	35P013	Rod	47	35R047	Washer	81	35P072	Spring Pin
14	35P014	Trigger's control	48	35P040N	Screw	82	19B081	Spring Pin
15	35P015	Spring	49	35P042N	O-Ring	84	35P082N	Screw
16	35P016	Valve	50	35P043	Nut	85	19B084	Screw
17	35P017N	Tube	51	35P044	Washer	86	35P081	E-Ring
18	35P018	Adjusting Rod	52	35P045	O-Ring	87	19B086	Spring Pin
19	35P019	Adjusting Plate	53	35P046N	O-Ring	88	35P080N	C-Ring
20	32P520	Front plate	54	35P047	Washer	90	35P084	Heli-Coil
21	35P021	Right jaw	55	35P041	Spring Washer	91	35P085	Plastic Pin
22	35P022	Left jaw	56	35P048	Screw	92	19B090	Wave Washer
23	35P023	Jaw seat	57	35P049	Spring Pin	93	19B091	Counter Balance Hanger
24	35P024	Plate	58	35P050	Screw	94	35P080N	C-Ring
25	35R025	Driver	59	35P051	Trigger Screw	95	32P541	Silencer
27	35R027	Driver guide unit	61	35P052	Spring Pin	07.25		Hex. Bar wrench
28	35R528	Spring pin	62	35P053	Teeth Washer	07.30		Hex. Bar wrench
29	19I029	Anvil	63	35P054	Screw	07.40		Hex. Bar wrench
30	19I030	Pusher	64	35P066	Spring Pin	D01		Oiler
31	19R031	Spring	65	35P056	O-Ring	D06		Staple remover
33	19R033	Spring	67	35P058	O-Ring			
34	19R034	Plate	68	35P059	O-Ring			

Dotazioni - Equipment - Ausrüstung - Équipements - Equipamiento - Παρεχόμενα
Equipamento - Uitrusting - Udstyr



 
07.25




07.30



07.40



D01

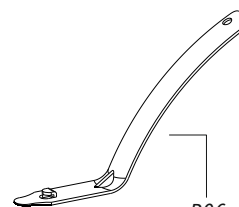

D06